

User and installation manual



D5 NEXT

aquasuite version X.17

Current as of April 2020

ENGLISH: PAGE 1

DEUTSCH: SEITE 31

All information contained in this manual is subject to change without prior notice.
All rights reserved.

Table of contents

1. Preface.....	4
2. Safety precautions.....	4
3. Scope of delivery.....	5
4. Assembly instructions.....	5
4.1. Detachable control unit, mounting options.....	5
4.2. Installation to a top/cover or reservoir.....	6
4.3. Permitted pump orientations.....	6
5. Electrical connections.....	6
5.1. Power Connector.....	6
5.2. Connector "USB".....	6
5.3. Connector "Fan" for fan or flow sensor.....	7
5.4. Connector "Bus" for aquabus or RGBpx.....	7
6. Operation.....	8
6.1. Operation via keys and display.....	8
6.2. Configuration using USB connection.....	8
7. aquasuite software.....	8
7.1. Installation of the aquasuite software.....	8
7.2. Basic operation.....	9
7.3. Symbols in the headlines.....	9
8. Overview pages (aquasuite).....	9
8.1. Desktop mode.....	10
8.2. Creating new overview pages and activating edit mode.....	10
8.3. Adding new elements.....	10
8.4. Editing existing elements.....	10
8.5. Values and names.....	10
8.6. Detailed data elements.....	11
8.7. Log data chart.....	11
8.8. User defined: Images, text, drawing elements.....	11
8.9. Export and import of overview pages.....	12
9. Data quick view and data log (aquasuite).....	12
9.1. Log settings.....	12
9.2. Analyze data.....	13
9.3. Manual data export.....	14
9.4. Automatic data export.....	14
10. Pump configuration.....	14
10.1. Pump mode power preset.....	14
10.2. Pump mode temperature set point.....	15
10.3. Pump mode curve controller.....	15
10.4. Pump mode flow controller.....	15
10.5. General pump settings.....	15

- 10.6. Pump behavior with aquabus connection to an aquaero..... 16
- 11. Fan configuration..... 16
 - 11.1. Fan mode power preset..... 16
 - 11.2. Fan mode temperature set point..... 16
 - 11.3. Fan mode curve controller..... 16
 - 11.4. General fan settings..... 17
 - 11.5. Fan behavior with aquabus connection to an aquaero..... 17
 - 11.6. Dual functionality – fan output or flow sensor input..... 17
- 12. RGBpx configuration..... 18
 - 12.1. Basic RGBpx settings..... 18
 - 12.2. LED mapping..... 18
 - 12.3. Sound controlled effects..... 18
 - 12.4. AMBIENTpx effect..... 18
- 13. Sensor configuration..... 19
 - 13.1. Water temperature sensor..... 19
 - 13.2. Options for flow rate measurement..... 19
 - 13.3. Virtual flow sensor..... 19
 - 13.4. Mechanical flow sensor..... 20
 - 13.5. Software temperature sensors..... 20
- 14. Alarm configuration..... 21
 - 14.1. Acoustic alarm and lighting..... 21
 - 14.2. Alarm reporting and alarm limits..... 21
 - 14.3. System alarms..... 22
- 15. Display configuration and information pages..... 22
 - 15.1. Display settings..... 22
 - 15.2. Charts..... 23
 - 15.3. Display pages..... 23
- 16. Profiles..... 23
 - 16.1. Manual profile selection..... 23
 - 16.2. Automatic profile selection..... 23
 - 16.3. Profile configuration..... 23
- 17. System settings D5 NEXT..... 23
 - 17.1. Device information..... 23
 - 17.2. Factory defaults..... 24
 - 17.3. aquabus/RGBpx configuration..... 24
 - 17.4. Firmware update and language selection (aquasuite only)..... 24
- 18. Playground (aquasuite)..... 24
 - 18.1. Virtual Software Sensors..... 24
 - 18.2. Global profiles..... 25
 - 18.3. Hotkeys..... 25
- 19. aquasuite web..... 26
 - 19.1. Data export..... 26

19.2. Data access.....	26
19.3. Data import.....	27
20. Basic settings (aquasuite).....	27
20.1. Language.....	27
20.2. Reorder menu items.....	27
20.3. Units.....	27
20.4. Application start-up.....	27
20.5. Service administration.....	28
20.6. Audio and video.....	28
20.7. Updates and update service.....	28
21. Technical details and care instructions.....	29
21.1. Technical details.....	29
21.2. Restore factory defaults.....	29
21.3. Care instructions.....	29
21.4. Waste disposal.....	30
21.5. Contact Aqua Computer.....	30

1. Preface

The D5 NEXT pump is built for longevity and to match the highest quality standards. It has been particularly designed for PC water cooling systems. The pump is based on the Laing/Lowara/Xylem D5vario pump and the stainless steel top with ceramic ball, the pump rotor and part of the electronics and housing are manufactured by Laing/Lowara/Xylem.

Laing D5 pumps are based on a shaftless spherical motor: The hemispherical rotor/impeller unit sits on an ultra-hard, wear-resistant ceramic ball. Due to its self adjusting properties, bearing play does not change even after prolonged use, the pump keeps on running on a constantly low noise level.

In addition to the proven characteristics of the Laing D5 mechanics, the D5 NEXT features outstanding monitoring and control options developed by Aqua Computer: The D5 NEXT is equipped with with an integrated fan controller for PWM fans, an USB interface as well as either an aquabus interface or a RGBpx effect controller for up to 64 individually addressable LEDs. An OLED display can be used to visualize current sensor readings or to configure the pump.

Considering the fast technical development, we reserve the right to perform alterations to the products at any time. It therefore is possible that your product does not correspond precisely to the descriptions or especially the illustrations in this manual.

2. Safety precautions

The following safety precautions have to be observed at all times:

- Read this manual thoroughly and entirely!

- Save your data onto suitable media before working on your hardware!
- The pump must not be placed under water!
- The pump controller on the rear end of the pump must not get in contact with water!
- The pump may only be used inside a PC case!
- The pump is not a suction pump. Make sure the pump chamber is filled with water prior to operation!
- The pump is not suited for dry operation!
- This product is not designed for use in life support appliances, devices, or systems where malfunction of this product can reasonably be expected to result in personal injury. Aqua Computer GmbH & Co. KG customers using or selling this product for use in such application do so at their own risk and agree to fully indemnify Aqua Computer GmbH & Co. KG for any damages resulting from such application!

3. Scope of delivery

The following scope of delivery applies to the retail version only, product code 41118:

- One D5 NEXT pump motor complete with detachable controller unit, silicone damper (replacement part no. 94694) and mounting plate (replacement part no. 94766)
- One internal USB cable (replacement part no. 53215)
- One mounting bracket, black (replacement part no. 94719)
- One silicone insert (replacement part no. 94695)
- Three screws M3 x 12 mm, countersunk head (replacement part no. 91149)
- Three washers M3 (replacement part no. 91019)
- Three hexagon nuts M3 (replacement part no. 91017)
- Four screws M4 x 8 mm (replacement part no. 91007)
- Four hexagon nuts M4 (replacement part no. 91053)
- One manual

4. Assembly instructions

4.1. Detachable control unit, mounting options

The controller unit of the pump can be removed by pulling it off the pump motor unit in a straight line. Make sure that no power is supplied to the pump whenever the controller unit is being removed from or re-attached to the pump motor unit! The controller unit can only be attached to the pump motor unit in a given orientation. Do not use excessive force but re-check the orientation if you encounter problems re-attaching the controller unit.

The pump may be installed into the PC case using the supplied silicone damper and mounting plate, either to a level surface or – using the supplied 90° bracket –

to a vertical surface. If these mounting options are not used, the silicone damper of the pump can be replaced with a flat silicone insert.

Please note that all mounting options that make use of the silicone damper require the pump to be installed vertically above the damper and are not designed to withstand lateral stress or transportation of the PC!

4.2. Installation to a top/cover or reservoir

For operation of the pump, a compatible top/cover is required, alternatively the pump may be installed directly to a compatible reservoir. In both cases, the pump motor will be held in place by fixation rings to be slid over the pump. In order to do so, detach the controller unit from the pump motor unit, fasten the pump motor using the fixation ring and re-attach the controller unit.

4.3. Permitted pump orientations

During operation, the impeller of the pump must be directed upwards or to the side relative to the controller unit. Operation with downwards oriented, "hanging" impeller is not permitted!

5. Electrical connections

ATTENTION: Completely turn off your power supply or disconnect the mains power cord from the wall outlet before connecting or disconnecting any cables to/from the device!

5.1. Power Connector


Connect a SATA power plug of your PC's power supply unit to this connector. Do not use excessive force but double check the polarity of the plug if you are having trouble to connect.

Pin assignment:	Pin 1, 2, 3, 11:	not connected
	Pin 4, 5, 6, 10, 12:	GND
	Pin 7, 8, 9:	5 V DC
	Pin 13, 14, 15:	12 V DC

5.2. Connector "USB"

This connector is used for USB communication with a PC. Connect to an internal USB header of your motherboard. Take special care to make sure the pin alignment matches your motherboard! The USB interface is used for data exchange with the PC and not required for pump operation.

The corresponding connector on the motherboard is usually a 9 pin connector with two independent USB ports. Both rows of 4/5 pins can be used to connect an USB device.

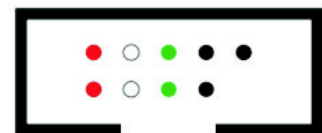

The black wires (GND) are to be connected to the side of the missing pin, see picture with colored pin assignment.

Pin assignment: Pin 1: GND (black, optional)
 Pin 2: GND (black)
 Pin 3: D+ (green)
 Pin 4: D- (white)
 Pin 5: +5 V (red)

5.3. Connector "Fan" for fan or flow sensor

Depending on configuration, this connector can either be used as a PWM regulated fan output with speed signal processing or to connect a flow sensor. Simultaneous use of both functions is not possible!

Pin assignment: Pin 1: GND
 Pin 2: 12 V / max. 25 W
 Pin 3: Speed signal
 Pin 4: PWM signal

Flow sensor and special interconnecting cable are optional accessories and not included in delivery.

Compatible flow sensors:

- Flow sensor with 5.6 mm nozzle (53061)
- Flow sensor "high flow" (53068)
- Connection cable for flow sensor (53027, 53100)

5.4. Connector "Bus" for aquabus or RGBpx

Depending on configuration, this connector can either be used for communication with other Aqua Computer devices or to connect RGBpx products (up to 90 addressable LEDs). Simultaneous use of both functions is not possible!

Compatible aquabus devices:

- aquaero 6 XT (53146, 53206, 53250, 53251, 53262, 53263)
- aquaero 6 PRO (53145, 53253)
- aquaero 6 LT (53234)
- aquaero 5 XT (53089, 53125, 53249)
- aquaero 5 PRO (53090, 53252)
- aquaero 5 LT (53095)

If the RGBpx product to be connected has more than one RGBpx connector, the connector marked with the word "IN" must be used! Additional RGBpx products may be connected to the "OUT" connector.

Compatible RGBpx products:

- RGBpx LED-Strip (53268, 53269, 53270)
- RGBpx lighting set (53271, 53272)
- RGBpx Splitly4 (53267)
- RGBpx LED ring for ULTITUBE (34115)

- RGBpx LED ring for aqualis (53274, 53276)
- RGBpx LED ring for 60 mm reservoir (53277)
- RGBpx cable (53259, 53260, 53261, 53266)

6. Operation

6.1. Operation via keys and display

The D5 NEXT is equipped with an OLED display and three keys and can be almost completely configured using these.

The left and right key will select information pages during display mode and select and alter menu entries. The middle key will open the device menu while in display mode and confirm selected menu entries or values while in the menu.

During configuration via keys and display, the aquasuite software should be closed on a connected PC! Otherwise, the aquasuite will overwrite and thereby cancel any settings made on the device itself.

6.2. Configuration using USB connection

The D5 NEXT can be connected to a PC via USB interface and can then be configured using the aquasuite software. Comprehensive visualization and logging options are also available in the aquasuite software. However, an USB connection is not required for operation.

7. aquasuite software

The Windows software aquasuite is an extensive software suite and can be used for configuration and monitoring. The software is not required for operation though. All configuration parameters can be saved into the device's memory.

Please note: Depending on the type of product you are using, some features may not be available for your device.

7.1. Installation of the aquasuite software

For configuration and monitoring of our products with USB interface, the aquasuite software is available for download from our website www.aqua-computer.de. You will find the setup program in the support section of the website under Downloads/Software.

The setup program checks all connected USB devices for embedded update service periods and offers various aquasuite versions depending on detected devices. If no device with update service for the latest aquasuite version is found, a warning is displayed and older aquasuite versions that do not require an update service purchase can be selected for installation. For installation and update service validation, an internet connection is required.

The latest aquasuite version may also be installed if no suitable update service period has been found in a device. Subsequently, update service may be purchased or an existing key may be entered within the aquasuite. These functions can be accessed in the aquasuite/Updates tab.

7.2. Basic operation

The program window is divided into two main areas. On the left side, a list of “overview pages”, data quick view, data logger, device pages, aquasuite web and aquasuite configuration is displayed, the right side shows the details of the currently selected list element. The list can be hidden or restored by clicking the arrow symbol in the upper left corner.

List elements may be minimized or maximized for easier access by clicking the title bar. The title bars may contain various symbols that will be explained in the following chapter.

7.3. Symbols in the headlines



Click the plus symbol in the “Overview pages” headline to create a new overview page.



Clicking the monitor symbol will toggle desktop mode for this overview page. While desktop mode is active, the color of the symbol will change to orange.



Overview page: Clicking the padlock symbol will unlock or lock this overview page for editing. Device: Device can not be used due to update service problems, see “Updates and update service” for details.



Clicking the gear symbol will access the basic configuration page of the selected list element.



In order to save all settings into a device, click the disk symbol in the headline.



This symbol indicates that communication with this device is not possible at the moment. Check USB connection and power supply of the device if necessary.

8. Overview pages (aquasuite)

Current sensor readings and diagrams from all supported devices can be displayed in overview pages. For each device a pre-configured overview page is automatically generated the first time the device is connected to the PC. These pages can be individually modified and new pages can be created. Within one overview page, data from all connected devices can be accessed.

8.1. Desktop mode

Each overview page can be displayed directly on your desktop. You can enable desktop mode for an overview page by clicking the monitor symbol in the list of overview pages. Desktop mode can only be enabled for one overview page at a time. With desktop mode enabled, elements of the overview page may cover program symbols on your desktop, but mouse clicks are transmitted to underlying desktop symbols.

If a overview page is unlocked for editing while desktop mode is active, the page will be displayed in the aquasuite window for editing and the current desktop will be displayed as background for your convenience.

8.2. Creating new overview pages and activating edit mode

In order to create a new overview page, click the plus symbol in the headline "Overview pages".

Existing overview pages can be unlocked for editing by clicking lock symbol in the page listing.

8.3. Adding new elements


If the currently selected overview page is unlocked for editing, a plus symbol is displayed in the top right corner of the screen. Click the symbol to add a new element to the page and select the desired element from the following list. All available data is displayed in a tree diagram, click the arrow symbols to access individual items.

Confirm your selection by clicking the check symbol in the bottom right corner. The new element will be displayed in the upper left corner and the configuration window is displayed. Configure the element as described in the next chapters.

8.4. Editing existing elements

If the currently selected overview page is unlocked for editing, right-clicking an element will access a context menu.

To access the settings of an element, select "Settings" in the context menu or simply double click the element. If you want to move an element, "drag" this element while holding down the mouse button. Release the mouse button when the element is at the desired position.

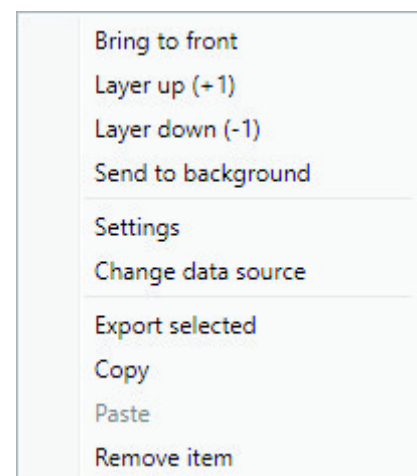

8.5. Values and names

If the currently selected overview page is unlocked for editing, right-click an element and select "Settings". You may also double click the element.

Font face, size and color as well as position, decimal places and unit can be configured for individual values.

8.6. Detailed data elements

If the currently selected overview page is unlocked for editing, right-click an element and select "Settings". You may also double click the element. Apart from position, size and color, the style of the element can be selected and configured. The following styles are available:

- **Headline only:** Compact display as a headline.
- **Text:** Displays the numerical value in a box with a headline.
- **Bar graph:** Displays numerical value as well as bar graph.
- **Chart:** Displays the value in chronological sequence as a chart.
- **Gauge:** Displays the value as a analog gauge.

All display styles offer extensive configuration options, additionally statistical data such as minimum, maximum and average can be displayed.

8.7. Log data chart

This element can be used to display charts on overview pages. The charts have to be created using the data log functionality of the aquasuite before they become available for overview pages. Please refer to the next chapter for details. Once a chart has been configured, it can be selected from the "Chart selection" list on the "Display" tab of the settings dialog.

8.8. User defined: Images, text, drawing elements

By using user defined controls, simple drawing elements such as circles, rectangles and texts as well as images and more sophisticated elements can be added to an overview page. To do so, add an "User defined" element to an overview page. Switch to the "Display" tab in following dialog box, select the type of element to be created from the drop down menu and confirm your selection by clicking the "Load preset" button. Depending on the type of element, an additional dialog may appear before the code (XAML, Extensible Application Markup Language) of the new element is displayed in the lower part of the dialog window. You may want to customize the code. By clicking the "Ok" Button, the new control is saved to the overview page.

Step-by-step example to add an image: Select "Image" from the drop down menu and click the "Load preset" button. Select an image file using the following file selection dialog. The code is then displayed in the lower part of the dialog window and can be modified. Save the new control by clicking the "Ok" button. The picture will be displayed on the overview page.

More complex controls such as data bindings and animations are also available but will require some programming experience for configuration.

8.9. Export and import of overview pages

Elements and complete overview pages can be exported from the aquasuite and can then be imported either on the same PC or on other PCs. For export as well as import, the overview page must be in edit mode.

To export a complete page, right click a free spot of the page and select "Export page" from the context menu. To export individual elements, select the element or elements, perform a right click and select "Export selected" from the context menu. For import, right click a free spot of the page and select "Import page" or "Import items" from the context menu. Using "Import page", the current page will be deleted and only the imported page items will be displayed, using "Import items" will add the items from file to the current page without altering the existing items. During import, the elements will be assigned to devices using the following scheme:

If a device with identical serial number is found on the computer, no changes are made.

If no device with identical serial number is found on the computer, the element will be assigned to the first device found of identical type.


When importing complex pages with elements referring to more than one device, it is recommended to edit the device assignment in the file using a text editor prior to importing.

9. Data quick view and data log (aquasuite)

All data currently monitored by the aquasuite can be accessed in the "Data quick view" section. This includes data from connected USB devices as well as hardware data supplied by the Aqua Computer background service. Displayed data may be filtered using the text box next to the magnifier icon, a chart shows the development over a maximum of ten minutes. All data shown here is not stored permanently.

In contrast, the "Data log" may be used to selectively and permanently store data from all connected Aqua Computer devices and hardware data supplied by the background service. Logged data can then be analyzed by creating charts or be exported to files. Data is only logged while the aquasuite software is being executed.

9.1. Log settings

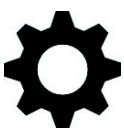

The log settings can be accessed by clicking the "Log settings" element below the "Data log" headline in the listing. To log data, create a new log data set by clicking the plus symbol in the upper right corner of the settings window. Enter name, time interval and configure automatic deletion of old data to meet your requirements. You may then add the data sources to log by clicking the plus symbol in the "Data sources" window section. You may add an unlimited number of data sources to each log data set, the total number of log data sets is also unlimited.

9.2. Analyze data



Logged data can be visually evaluated as charts. To do so, select “Analyze data” below the “Data log” headline in the listing. The chart will initially be empty, directly below the chart are eight buttons to modify the chart. In the lower section of the window, the chart data can be configured.


To add data to the chart, first select the “Data sources” tab in the chart configuration and select a data set to be displayed. If no data sources are available, you will have to configure the log settings as described in the chapter “Log settings” of this manual. Select the time period to be displayed on the right side of the window and add the data to the chart by clicking the “Add data to chart” button. Repeat this procedure if you want to display more than one data set in the chart.

You may modify the chart using the “Chart setup” and “Data series setup” tabs. Finally, you can use the “Chart manager” tab to save the current chart configuration and to load or delete previously saved configurations. All saved chart configurations will be available on overview pages for the “Log data chart” element.


The currently displayed chart can be edited by using the buttons directly below the chart and may also be saved as an image file. The button corresponding to the currently selected function is highlighted by an orange frame. Please refer to the following list for details on each function:



To save the currently displayed chart as an image file, click the floppy disk symbol and select a name and location in the following dialog.



This function can be used to add horizontal lines to the chart. While this function is activated, simply click into the chart to add a line at the current cursor position.



This function can be used to add vertical lines to the chart. While this function is activated, simply click into the chart to add a line at the current cursor position.



This function can be used to add annotations to the chart. While this function is activated, simply click into the chart to add an annotation at the current cursor position. By clicking into the text box, you may edit the text. You may also drag the little circle beside the text box to move the connecting line to the desired position. Use drag and drop to move existing annotations.



This function can be used to remove horizontal/vertical lines or annotations from the chart. While this function is activated, simply click the element to be removed.



This function can be used to move the visible portion of the chart. Press and hold the mouse button while moving the cursor in the chart to select the position to be displayed, then release the button.



This function can be used to zoom in and out. Use the mouse wheel or select the area to be displayed. You can reset the zoom settings by double-clicking in the chart area.



This function can be used to reload and update the chart.



This function will completely remove the chart.

9.3. Manual data export

Saved data can be exported from the data log into a XML file. To do so, select “Analyze data” below the “Data log” headline in the listing. Select the “Data sources” tab in the chart configuration and select a data set to be exported. If no data sources are available, you will have to configure the log settings as described in the chapter “Log settings” of this manual. Select the time period to be exported on the right side of the window and start the export process by clicking the “Export data” button. Enter a file name and path in the following dialog window.

9.4. Automatic data export



The automatic data export feature can be used to save data from the aquasuite into an XML file on the hard disk or in the RAM (“memory mapped file”) in a regular time interval. The automatic data export will always overwrite the previously saved data, so the file always contains only the most recent data set. Select “Automatic data export” below the “Data log” headline in the listing to access the settings screen. Create a new export data set by clicking the plus symbol in the upper right corner of the screen. Enter name, path and time interval to meet your requirements. You may then add the data sources to log by clicking the plus symbol in the “Data sources” window section. You may add an unlimited number of data sources to each export data set, the total number of export data sets is also unlimited.

10. Pump configuration



aquasuite: Select “Pump” from the device list below the “D5 NEXT” entry. In the upper area, current pump data is displayed as plain text as well as in a diagram. Select the desired mode of operation below the diagram.

Device menu: Select “Pump” from the menu list and confirm by pressing the middle key.

10.1. Pump mode power preset

If power preset mode is selected, you can manually set the desired rotation speed of the pump.

10.2. Pump mode temperature set point

This mode can be used to automatically adjust pump speed depending on the current temperature reading of one of the up to nine available temperature sensors. The desired target temperature can be configured, all other parameters should not be changed for normal operation.

Please note that pump speed and the resulting changes in flow rate have only a minor influence on temperatures in a typical water cooling setup. This mode may therefore not effect the expected results.

10.3. Pump mode curve controller

This mode can be used to automatically adjust pump speed depending on the current temperature reading of one of the up to nine available temperature sensors. The controller curve can be configured by assigning output values to 16 corresponding temperature values. The output values in percent correlate to the pump speed range from ca. 2000 to 4800 rpm. So a value of 50 % correlates to a pump speed of ca. 3400 rpm, a step of 1 % correlates to a speed change of ca. 28 rpm. If the selected speed cannot be attained, the pump controller will use the highest stable rotation speed instead.

In the aquasuite, controller curves can easily be adjusted using drag & drop and curves can automatically be generated from start and end points. In the graphical curve display, the currently displayed area can be changed using the following methods:

- Mouse wheel movements will zoom in and out.
- A double click on an axis will reset zoom level for this axis, a double click into the diagram will reset both axes.
- Selecting an area on an axis will zoom this axis to this area, selecting an area in the diagram will zoom both axes to this area.
- Mouse movement while right button is pressed will move the displayed area of the diagram.

10.4. Pump mode flow controller

This mode can be used to automatically adjust pump speed depending on the current flow rate. The desired flow rate can be configured between 50 to 300 liters per hour.

10.5. General pump settings

Depending on currently selected mode of operation, additional parameters can be configured.

The fan output range can be limited by setting "Minimum power" and "Maximum power" values correspondingly.

The "Maximum rotation speed for bar graph and chart" setting applies only to diagram scaling within the aquasuite and has no effect on the pump function.

10.6. Pump behavior with aquabus connection to an aquaero

As soon as an aquabus connection between the D5 NEXT and an aquaero 5/6 is established, the pump function is solely controlled by the aquaero. All settings in the D5 NEXT regarding pump function will be ignored. Only if aquabus is disconnected, the settings in the D5 NEXT will be used for controlling the pump function again.

11. Fan configuration



aquasuite: Select "Fan" from the device list below the "D5 NEXT" entry. In the upper area, current fan data is displayed as plain text as well as in a diagram. Select the desired mode of operation below the diagram.

Device menu: Select "Fan" from the menu list and confirm by pressing the middle key.

11.1. Fan mode power preset

If power preset mode is selected, you can manually set the desired output power of the fan output.

11.2. Fan mode temperature set point

This mode can be used to automatically adjust fan speed depending on the current temperature reading of one of the up to nine available temperature sensors. The desired target temperature can be configured, all other parameters should not be changed for normal operation.

11.3. Fan mode curve controller

This mode can be used to automatically adjust fan speed depending on the current temperature reading of one of the up to nine available temperature sensors. The controller curve can be configured by assigning output values to 16 corresponding temperature values.

The output value in percent corresponding to the current temperature is scaled to the range between minimum and maximum fan power settings before being applied to the fan output.

The startup temperature will also be factored into the controller output. The output power defined in the curve controller will be ignored and set to 0 % as long as the input temperature has not exceeded the defined startup temperature for the first time. After the startup temperature has been exceeded, the output will strictly be set according to the defined curve until the output value goes down to 0 % again. This will trigger the startup process again, meaning the temperature has to exceed the defined startup temperature again before the curve will be in effect once more. This behavior is meant to prevent fans assigned to the curve controller to be

switched on and off in rapid succession. If the first point on the curve is set to a power greater than 0 %, this behavior is deactivated.

In the aquasuite, controller curves can easily be adjusted using drag & drop and curves can automatically be generated from start and end points. In the graphical curve display, the currently displayed area can be changed using the following methods:

- Mouse wheel movements will zoom in and out.
- A double click on an axis will reset zoom level for this axis, a double click into the diagram will reset both axes.
- Selecting an area on an axis will zoom this axis to this area, selecting an area in the diagram will zoom both axes to this area.
- Mouse movement while right button is pressed will move the displayed area of the diagram.

11.4. General fan settings

Depending on currently selected fan mode, additional parameters can be configured.

The start boost feature can be used to reliably power up a fan or pump connected to the output. If activated, the controller will set the fan output to the 100 % power for a short duration before switching to normal operation whenever the output power changes from exactly 0 % setting to a higher value.

The fan output range can be limited by setting "Minimum power" and "Maximum power" values correspondingly. The check box "Hold minimum power" determines whether the fan will be switched off during a power setting of 0 % (box not checked) or remain active at the set minimum speed (box checked). Set minimum power to a value at which the connected fan reliably starts up.

The "Maximum rotation speed of connected fan" setting applies only to diagram scaling within the aquasuite and has no effect on the fan output.

11.5. Fan behavior with aquabus connection to an aquaero

As soon as an aquabus connection between the D5 NEXT and an aquaero 5/6 is established, the fan output is solely controlled by the aquaero. All settings in the D5 NEXT regarding fan function will be ignored. Only if aquabus is disconnected, the settings in the D5 NEXT will be used for controlling the fan output again.

11.6. Dual functionality – fan output or flow sensor input

The fan output can alternatively be used as a flow sensor input. Simultaneous connection of fan and flow sensor is not possible. The connector function is determined by the "sensor type" selection of the flow measurement as described in chapter 13. If the connector is to be used as a fan output, select "virtual flow sensor" as "sensor type".

12. RGBpx configuration



aquasuite: Select “RGBpx” from the device list below the “D5 NEXT” entry.

Device menu: The RGBpx configuration is not available in the device menu, please use the aquasuite for configuration.

12.1. Basic RGBpx settings

Configure maximum brightness for the integrated illumination and attached RGBpx components (if present). It is also possible to completely disable all lighting functions.

12.2. LED mapping

The six RGBpx LEDs integrated into the Controller unit are assigned to a dedicated LED controller. For RGBpx components connected to the D5 NEXT, a total of four independent LED controllers can be configured to control sections of the connected LEDs. After clicking the gear symbol next to the LED controller to be configured, all available effects are displayed. Select the desired effect and confirm by clicking the check symbol in the lower right corner.

Most effects offer extensive customization options such as color selection or speed adjustment. Additionally, many effects can be configured to modify effect parameters depending on current sensor data.

12.3. Sound controlled effects

Sound controlled effects can be used to visualize the current audio output of the computer. A warning in the LED configuration area will notify you if audio analysis has been disabled in the aquasuite. In this case, please enable the feature in the general aquasuite configuration. The general aquasuite configuration can also be used to modify existing audio filters and define custom audio filters.

12.4. AMBIENTpx effect

The AMBIENTpx effect replicates the border area of the current monitor content on the configured LEDs. This effect is meant to be used with LED strips installed to the rear of the monitor for background lighting. A warning in the LED configuration area will notify you if video analysis has been disabled in the aquasuite. In this case, please enable the feature in the general aquasuite configuration.

For each configured AMBIENTpx effect, please select the correct monitor, edge and desktop range to evaluate for the effect.

Prerequisites and limitations:

- The AMBIENTpx effect requires Microsoft Windows operating system version 8.1 or newer.

- Screen content preventing analysis by DRM or similar methods cannot be analyzed.
- Multi monitor setups must be configured using standard procedures of the operating system. Special features of the graphics card driver like “NVIDIA Surround” or “AMD Eyefinity” must be disabled.
- AMBIENTpx is not available while “NVIDIA G-Sync” is active.

13. Sensor configuration



aquasuite: Select “Sensors” from the device list below the “D5 NEXT” entry.

Device menu: Select “Sensors” from the menu list and confirm by pressing the middle key.

13.1. Water temperature sensor

The D5 NEXT continually monitors coolant temperature using an integrated temperature sensor.

If necessary, the temperature sensor can be calibrated by adding an offset of ± 15 °C.

13.2. Options for flow rate measurement

The D5 NEXT is able to continuously calculate the current flow rate from a variety of pump parameters after an initial calibration process. Aqua Computer refers to this method as “virtual flow sensor”.

Alternatively, a mechanical flow sensor can be connected to the fan output of the D5 NEXT controller unit.

Flow rate measurement using a mechanical flow sensor is significantly more accurate than calculating the flow rate from pump parameter readings. Nevertheless, the “virtual” flow sensor is sufficient to detect failures or for example blocked/kinked tubing.

13.3. Virtual flow sensor

In order to enable virtual flow measurement, select the corresponding entry in the “sensor type” selector.

Prerequisites for use:

- Double Protect Ultra as coolant
- Pump speed of at least 3000 rpm
- Flow rate of at least 80 l/h
- No additional pump in the cooling system
- Calibration process completed

Flow rates below 80 l/h will not be displayed due to increasing imprecision of the calculation method for low flow rates.

For calibration, the pump has to be operated with blocked coolant flow for a short period of time. This can be achieved by kinking a hose within the coolant loop or by closing a ball valve/stop valve installed into the coolant loop.

Calibration process:

1. The system has to be perfectly deaerated, no bubbles or foam visible in the coolant.
2. Coolant temperature should be between 25 °C and 35 °C.
3. Ensure that the computer is currently idle and no high-load background tasks are currently active. During calibration, no coolant is pumped through the system!
4. Block coolant flow by kinking a hose or closing a stop valve in the coolant loop.
5. Start the calibration process either using the aquasuite or the device menu.
6. Wait for the calibration process to complete. The process takes approximately 30 seconds. If errors occur or if the calibration process has not finished after 60 seconds, immediately proceed to the next step.
7. Restore coolant flow. Ensure no hoses are kinked and stop valves if present are fully opened.

Limitations: Flow rate can not be calculated if a second pump is present in the cooling circuit! Flow rate calculation is calibrated for DP Ultra viscosity and will deviate when using other coolants or pure water!

13.4. Mechanical flow sensor

Calibration values for sensors sold by Aqua Computer can conveniently be selected from a drop-down list. Select the appropriate entry in the “sensor type” selector for the flow sensor connected to the D5 NEXT.

Connect the flow sensor to the fan output of the D NEXT controller unit. Simultaneous connection of fan and flow sensor is not possible. If the connector is to be used as a fan output, select “virtual flow sensor” as “sensor type”.

If necessary, the flow rate can be calibrated by $\pm 10\%$.

13.5. Software temperature sensors


Software temperature sensors can be used to transfer temperature sensor readings from the computer to the D5 NEXT by USB connection.

During installation of the aquasuite, the background service “Aqua Computer Service” is also installed. This service supplies various data from PC components and imported data from aquasuite web, additionally sensor data provided by third party software can be accessed. In order to access third party software data, the third party software has to be correctly installed, configured and running.

Currently, the “Aqua Computer Service” supports data transfer from “HWiNFO” (REALiX, Freeware, www.hwinfo.com) and “AIDA64” (FinalWire Ltd., subject to license fees, www.aida64.com).

HWiNFO automatically exports all sensor values, the "Sensor Status" Window has to be open.

In the AIDA64 preferences menu, writing to WMI must be activated in the "external applications" sub-menu:

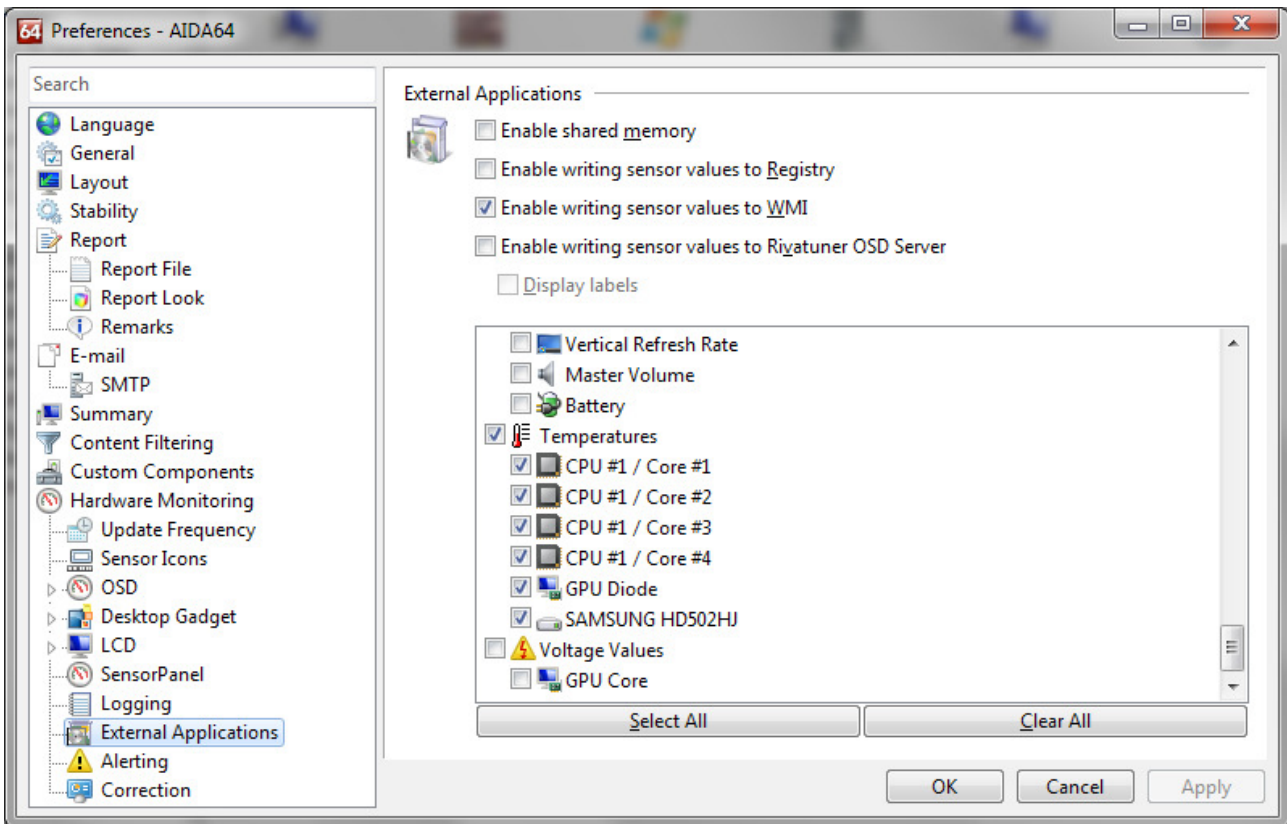

Click the "Select data source" button to assign each software sensor to a temperature sensor provided by third party software.

14. Alarm configuration



aquasuite: Select "Alarms" from the device list below the "D5 NEXT" entry.

Device menu: Select "Alarms" from the menu list and confirm by pressing the middle key.

14.1. Acoustic alarm and lighting

The acoustic alarm setting determines whether the alarm buzzer will be activated during alarm conditions. The alarm buzzer is always active for non-configurable systems alarms regardless of this setting.

Additionally, the LEDs integrated into the controller unit and connected RGBpx components can be configured to flash red during alarm conditions.

14.2. Alarm reporting and alarm limits

Select the data sources to be monitored and set appropriate alarm limits. If the current reading is below the limit (flow sensors) or higher than the limit (tempera-

ture sensors) or no fan speed signal is detected, an alarm will be raised if the check box “Activate alarm evaluation” is set for this value.

While an alarm condition is detected, the pump display will permanently show a corresponding information screen. If more than one alarm is active, the displayed information will alternate between corresponding screens in short order. To change the alarm configuration, you may still access the menu during alarm conditions by pressing the middle key next to the display.

On the alarm page within the aquasuite, all sources that currently raise an alarm are highlighted with a red background color. Alarms that have been active at least once since pump start-up, but are not active presently, are highlighted with a yellow background color.

Make sure only to use readings for alarm evaluation that are functional with your specific setup.

14.3. System alarms

System alarms are raised for severe malfunctions and can not be configured. **If a system alarm is detected, the water cooling system will be either inoperational or severely impaired, instant action (shutdown of the PC) is mandatory!** The alarm buzzer is activated whenever a system alarm is detected.

The following system alarms can be detected:

- Supply voltage failure 12 V: Pump function not guaranteed, fan output function not guaranteed. **Shut down PC immediately!**
- Supply voltage failure 5 V: Pump function not guaranteed, fan output function not guaranteed. **Shut down PC immediately!**
- Pump speed failure: Pump function not guaranteed. **Shut down PC immediately!**
- Fan current too high: Fan output deactivated. **Shut down PC immediately!**
- Fan output short circuit: Fan output deactivated. **Shut down PC immediately!**

15. Display configuration and information pages



aquasuite: Select “Display” from the device list below the “D5 NEXT” entry.

Device menu: Select “Display” from the menu list and confirm by pressing the middle key.

15.1. Display settings

Units for temperature and flow measurement can be selected, display brightness and page interval can be adjusted.

As with all OLED displays, the brightness of active pixels will reduce over time. For a homogeneous wear of all pixels, the display can automatically be inverted half of the time. In order to counteract existing wear, the inverted mode can be permanently activated.

15.2. Charts

Four configurable chart pages are available to be displayed in the pump display. Data source and refresh rate can be selected for each chart.

15.3. Display pages

During normal operation, a variety of predefined display pages are available. Each of these pages can be activated or deactivated individually.

16. Profiles



aquasuite: Select "Profiles" from the device list below the "D5 NEXT" entry.

The profile management can be used to save four configurations as profiles and activate them manually or automatically. Profile management is a software feature of the aquasuite and requires a USB connection to the D5 NEXT.

16.1. Manual profile selection

Select the profile to be activated by clicking the corresponding button.


16.2. Automatic profile selection

Profiles can be activated automatically using the global profiles feature of the aquasuite, see chapter 18.2. for details.

16.3. Profile configuration

All configuration changes are automatically stored in the currently active profile. The current configuration can also be stored in any other profile by clicking the corresponding button.

17. System settings D5 NEXT

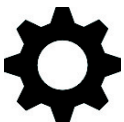

aquasuite: Select "System" from the device list below the "D5 NEXT" entry.

Device menu: Select "System" from the menu list and confirm by pressing the middle key.

17.1. Device information

The details displayed here might be required when you contact our service for support. You may enter a "Device description" for easier identification, this text will be displayed in the device list and in the data quick view.

17.2. Factory defaults

Click the button “Reset device to factory defaults” in the aquasuite or select the “Factory defaults” entry from the menu for a complete reset of all settings. You will have to completely reconfigure the device after resetting it to factory defaults!

17.3. aquabus/RGBpx configuration

Depending on configuration, the “bus” connector can either be used for communication with an aquaero 5/6 or to connect RGBpx products. Simultaneous use of both functions is not possible!

Before connecting two D5 NEXT pumps simultaneously to an aquaero 5/6 via aquabus, each pump has to be configured to a unique aquabus address. If only one device is connected via aquabus, this step may be skipped. Address 30 and 31 are available. Please note that aquastream ULTIMATE and aquastream XT as well as D5 NEXT share resource assignments in the aquabus device handling of the aquaero. A combined maximum of two pumps of these types can be managed by the aquaero.

Changes to the bus address configuration are effective within a few seconds. However, it may take up to five minutes for a connected aquaero to update its configuration.

17.4. Firmware update and language selection (aquasuite only)

The most up to date firmware for all supported devices is always included in the current version of the aquasuite software. The button “ Update firmware now” will start the update process for the device firmware.

During the firmware update process, the language of the pump menu will automatically be set to the currently selected language in the aquasuite software. To change the language of the pump menu, first select the desired language in the basic aquasuite settings and restart the aquasuite software. Afterwards, perform a firmware update of the D5 NEXT to change the language of the pump.

During the firmware update process, do not disconnect the device from the PC and do not power down the PC! After the firmware is successfully updated, the aquasuite software will be automatically closed.

18. Playground (aquasuite)

Click the entry “Playground” to configure Virtual Software Sensors, global profile management and hotkeys.

18.1. Virtual Software Sensors




Virtual Software Sensors can be used for extensive yet easy to use adaptation and calculation of sensor values using mathematical and logical functions as well as filters.


Create a new Virtual Software Sensor by clicking the plus symbol in the upper right corner of the “Virtual Software Sensors” window. Each Virtual Software Sensor always has an “Out” element which will provide the resulting sensor value. In the settings dialog of this element, the name and unit of the sensor can be configured. You can now add data sources and function blocks to the lower area of the sensor window and connect inputs and outputs of the blocks with lines. Connect the output of the last function block with the “Out” element.

The resulting virtual sensor can be used within the aquasuite software, for example for overview pages, additionally it may be transmitted via USB connection to connected devices that feature software sensors.

The following (very simple) example calculates the average out of two temperatures:

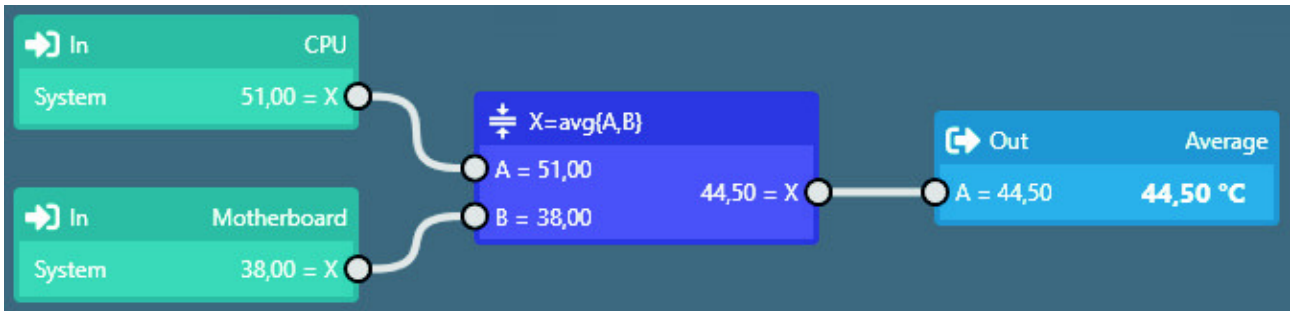

18.2. Global profiles

 The global profile management can be used to conveniently change settings in multiple devices simultaneously and activate desktop pages. Individual actions can be defined for each of the four profiles, switching between profiles can either be done manually or automatically depending on configurable rules.

In order to use this feature, set up profiles within the individual device configurations first. These profiles can then be activated using the global profile management. Not every type of device supports profiles.

Buttons in the upper window area can be used to switch between global profiles. Alternatively, the profile icon in the title bar of the aquasuite window or a profile icon in the system tray may be used.

Example use cases: Switching of LED illumination settings depending on current time of day or modification of fan settings when a graphics application is launched.

Notice for profile activation depending on running applications: During configuration of the respective rule in the aquasuite, the application to be configured must already be running. The application selection within the aquasuite will always show currently running applications and processes only.

18.3. Hotkeys

Hotkeys are key combinations that will be processed system-wide and can activate global profiles or desktop pages. The configured key combinations will be regis-



tered in the operating system and be processed by the background service. If the configured actions only use the profile management, the aquasuite does not have to be running for hotkeys to be operational; if desktop pages are used, the aquasuite must be running.

Do not use key combinations for this function that are required by other applications.

19. aquasuite web

Click the entry “aquasuite web” to publish data on the internet or import data from the internet. The server for this service is operated by Aqua Computer and provided for use with the aquasuite, without warranty for error free operation or permanent availability. Aqua Computer reserves the right to limit or cancel this service at any time.

19.1. Data export



To publish data, create a new export data set by clicking the plus symbol in the upper right corner of the “Data export” window. The name of the data set may be modified to meet your requirements. You may then add the data sources to export by clicking the plus symbol in the “Data sources” window section. By clicking the gear symbol, the name of the corresponding value can be changed. Up to 30 data sources can be added to each export data set, the total number of export data sets is limited to 10. All selected values will be transmitted to the Aqua Computer server by the Aqua Computer background service approximately every 15 seconds, even after closing the aquasuite.

Notice regarding data security: All data contained in the configured export data sets is transmitted to the Aqua Computer server with transport security. The server stores the data set in volatile memory until a new data set is received or until 10 minutes have passed. Data received is not permanently stored, data is also not correlated to IP addresses or other personal data. Data on the server may be accessed by anyone without restrictions, furthermore automatic data collection and recording through third parties is possible. Use the data export feature for data that you want to publish publicly and are allowed to do so only.

19.2. Data access



Published data can be obtained from the Aqua Computer server in various formats. Generally, the “access key” is required to access data.

In addition to access through any internet browser and importing data into the aquasuite, data is also available in JSON format and compatible to Circonus. Furthermore, the server generates banner images in two different sizes from the transmitted data, suitable to be included in forums signatures. The code required for the Aqua Computer forums is provided for your convenience.

19.3. Data import




To import a data set from the Aqua Computer server, the “access key” of the data set is required. The access key can be found in the aquasuite on the computer providing the data in the “Data access” section.

Create a new import entry by clicking the plus symbol in the upper right corner of the “Data import” window. Enter the access key of the data set to be imported. Up to 10 data sets (each containing up to 30 values) can be configured.

In order to verify that data is being imported, use the “Data quick view” feature in the aquasuite. Navigate to “Data from Aqua Computer service”, then “aquasuite web”. For each imported data set, you should find an entry with the name of the data set containing the individual values. It may take a few seconds before imported data is displayed.

20. Basic settings (aquasuite)

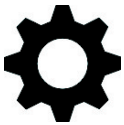

Click the entry “Settings” below the headline “aquasuite” to access basic settings for language, units and start-up of the software.

20.1. Language

Select a language from the drop down menu. After changing the language setting, the software will have to be restarted.

20.2. Reorder menu items

The order in which overview pages and devices are displayed in the list can be adjusted to your preference. Activate the reorder mode by clicking the “Edit menu order” button or by clicking and holding one of the elements for a few seconds. Sort the list items by clicking the arrow symbols and exit the reorder mode by clicking the check symbol on the right side of the window when done.


20.3. Units

Select the units to be used for temperature and flow values from the drop down menus. After changing these settings, the software will have to be restarted.

20.4. Application start-up

You may customize start-up behavior to suit your preferences. You may also select to hide the task bar symbol of the software when minimized.

20.5. Service administration



The background service configures special USB settings for all connected Aqua Computer devices, provides hardware data, software sensors, profile management and aquasuite web and should therefore always be active.

The hardware monitoring features of the background service can be disabled for specific categories if errors occur.

20.6. Audio and video



The background service can analyze audio and video data and provide it to connected devices. Both functions can be enabled and disabled separately.

Notices for video analysis: Screen content preventing analysis by DRM or similar methods cannot be analyzed. If a graphics card is configured for variable refresh rate or a modified refresh rate, video analysis may fail; please deactivate this function in the graphics settings of the operating system if necessary.

20.7. Updates and update service




For software activation, all aquasuite versions starting with version 2017 require an active update service for the initial release date of the respective version. Update service periods are generally assigned to individual devices, brand-new devices automatically contain update service for a specific period depending on the type of the device. For software activation, at least one device in the computer must contain a corresponding update service period that includes the release date of this software version. If a valid update service period is detected for at least one device, all devices connected to the computer can be used with this version. It is not mandatory that each device has a corresponding update service period. For update service validation, the aquasuite requires an internet connection.

After successful validation, a file containing current data is stored on the computer. A re-validation is performed only if a new software version (update) is installed or upon connection of new devices. New devices can not be used prior to re-validation, even if other devices with corresponding update service periods are connected at the same time.

To purchase update service, please use the “Buy” button, which will open a website with current prices and payment options.

If you have received a key for update service with a device or bought one separately, you may enter the key after clicking the “Register” button. Select a currently connected USB device from the list for update service assignment. After clicking the “Register key” button, the update service period is permanently assigned to the

selected device and stored on the Aqua Computer update server. The key will not have to be re-entered after re-installation of the software or transfer of the device to another computer, but transferring the update service period to another device is not possible.

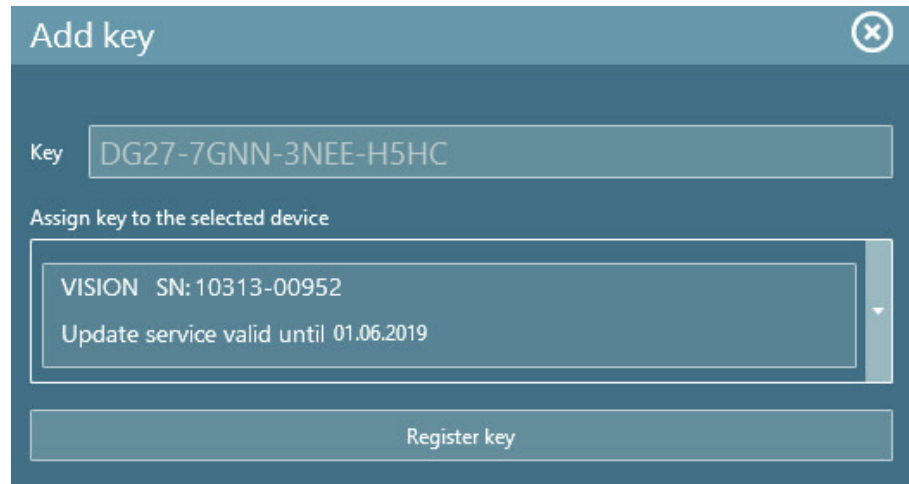

During update service validation and software activation, device serial numbers and a calculated computer ID are transmitted to and stored on the update server. No further personal information such as IP addresses are stored.

21. Technical details and care instructions

21.1. Technical details

Power supply voltage (Vin):	5 V DC \pm 5 %, 12 V DC \pm 5 %
Maximum power consumption:	65 Watts (including fan and RGBpx)
Maximum pump pressure:	370 mbar (approx. 3.7 m water head)
Maximum fan output power:	25 Watts
Ambient temperature range:	10 to 40 °C (noncondensing)
Coolant temperature:	0 to 50 °C
Dimensions (L x W x H)	ca. 66 x 65 x 78 mm (without attached cables)

21.2. Restore factory defaults

There are two options to reset the pump controller to factory defaults. Restoring factory defaults may be useful if the pump is not properly operating or if erroneous settings have been saved into the pump.

1. aquasuite: Click the "Reset device to factory defaults" button on the "System" screen.
2. Device menu: Select "System", then "Factory defaults" and confirm by pressing the middle key.

21.3. Care instructions

Use a dry and soft cloth for cleaning. All electronic components and headers must not get in contact with coolant or water!

21.4. Waste disposal

This device has to be disposed of as electronic waste. Please check your local regulations for disposal of electronic waste.



21.5. Contact Aqua Computer

We are always happy to answer questions regarding our products and to receive feedback. For answers on frequently asked questions, please also check our website www.aqua-computer.de. You might also want to visit our forums and discuss our products with experienced moderators and thousands of members – available 24/7. To get in direct contact with our customer support team, we offer several options:

Email: support@aqua-computer.de

Postal address: Aqua Computer GmbH & Co. KG
Gelliehäuser Str. 1
37130 Gleichen
Germany

Tel: +49 (0) 5508 9749290 (9-16 h CET, German and English language)